

## Copper Mountain - TV Scanning Instructions

ResortInternet – October, 2015

>Different Types of TVs will have different steps for accurate Channel scanning. This document is a guideline to help you with scanning your TV to ensure you receive all the available channels. \*\*\*Note – Analog TVs will not scan digital channels (i.e. tube-type TVs or some older flat screen TV's that do not have built in digital tuners)

>This is a digital/analog hybrid system, with 74 digital and 26 analog channels.

Step 1:

- Access the **TVs menu** via remote control or button on the physical TV itself.
- See pictures below.




Step 2:


- Find the **Setup** option and locate **Channel Scan**, which can also be called *Auto Program, Auto Channel Scan, Auto Search or Channel Programming*.
- Make sure the **Tuner Mode** is set to **Cable**, not **Antenna**.

- If you're given the option for STD, HRC, or IRD also make sure **STD (Standard)** is chosen before beginning the scan.
- Then press **OK, Start, or Begin Scan** to initiate the channel scanning process.
- See pictures below.


TV Setup Option

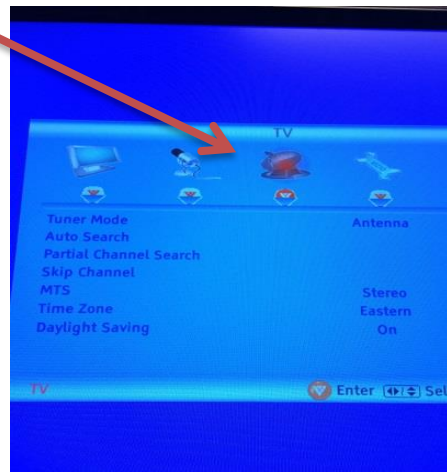

Tuner Mode set to Cable

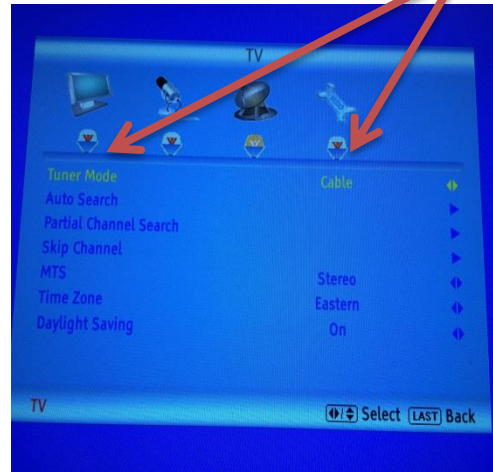


Auto Search Option

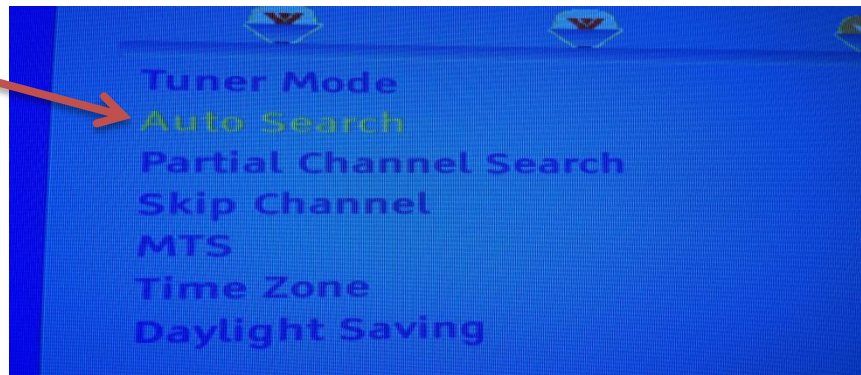

**Step 3:**

 - Allow channel scanning to complete which may take up to half hour on some TVs.

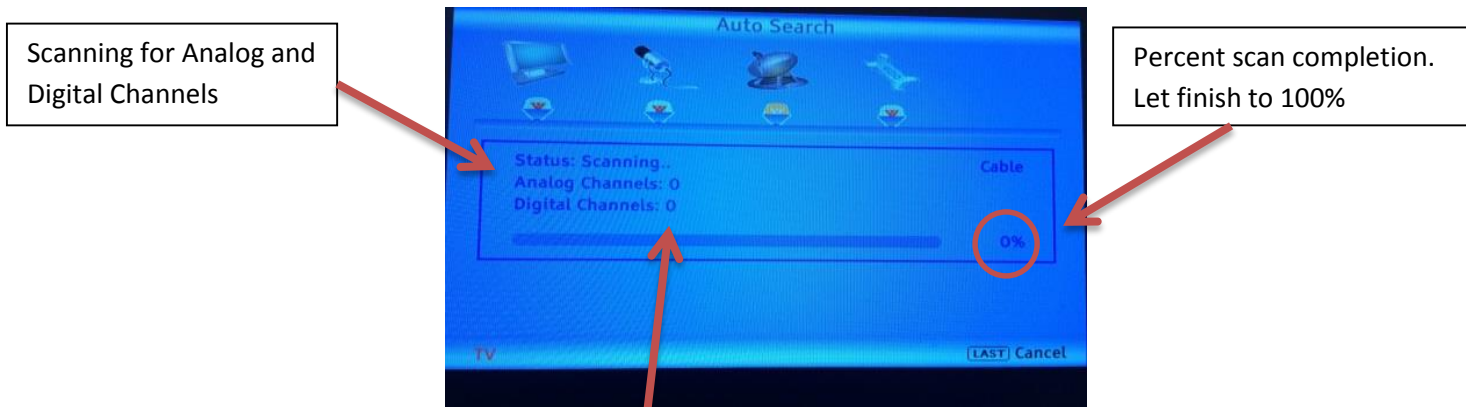

**Step 4:**

- Record how many channels the TV scans and make sure it matches the number of channels in the system, which is **74 digital and 26 analog at Copper Mountain.**
- Some older TVs will not scan all digital channels if the tuner will not allow so the number may not always be 74.
- View some of the TV channels to confirm no picture clarity problems such as tiling, green screen or pixilation.

**COMPLETE!**